

Instructions for Trigger Tension Adjustment:

Stop: make no adjustment with the release attached to the bow.

Increase Trigger Tension:

Turn hollow Tension Set Screw clockwise.



Figure 1

Decrease Trigger Tension:

Turn hollow Tension Set Screw counter clockwise. **Note: If tension is too low, the release cannot be cocked.**

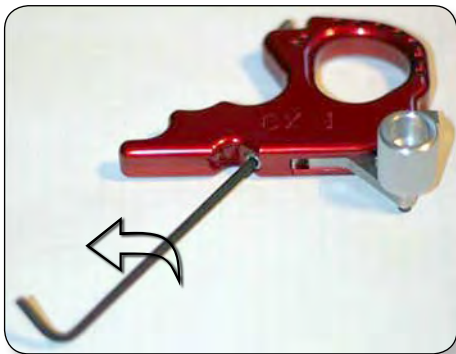


Figure 2

Change Tension Spring:

Turn hollow Tension Set Screw counter clockwise and remove Spring.



Figure 3

Replace Tension Spring:

Reinstall spring and hollow Set Screw as shown in Figure 4.

Turn hollow set screw clockwise (Fig. 5) **Do not force the Set Screw during installation. The hollow Set Screw should go in with very little force. If screw is forced, the threads could be damaged.**



Figure 4

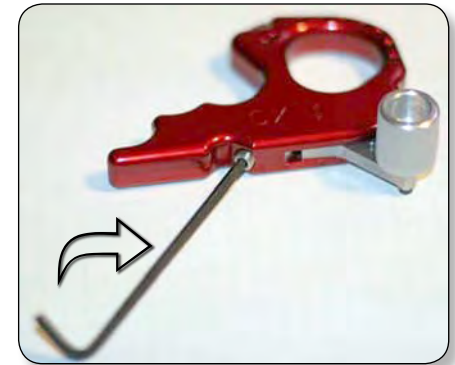


Figure 5



Figure 6 (Complete)

Product and Service Information



CCPorter, Inc.

Precision Shooting Products

PO Box 2 | Covina, CA 91723-0002
Phone: (626) 966-8138 | Fax: (626) 966-8138
support@thecenterx.net | www.thecenterx.net