

Instructions for Sear Travel Adjustment:

Stop: make no adjustment with the release attached to the bow.

Stop! Sear travel comes pre-adjusted to maximize performance. Because the trigger travel is amplified some users will not notice a difference, if the Sear is adjusted.

If for some reason it needs to be adjusted, follow these steps:

Locate Sear Set Screw:

Sear Set Screw is located inside the larger hollow tension adjustment screw, as shown in Figure 1.

Note: Do not use thread locking compound on Sear Set Screw. It is held in place by a locking helical insert.



Figure 1

Adjusting Sear:

Cock release by depressing Cocking Button. Turn Sear Set Screw clockwise until the Cocking Button is released, as shown in Figure 2 & 3.



Figure 2

Cocking Button

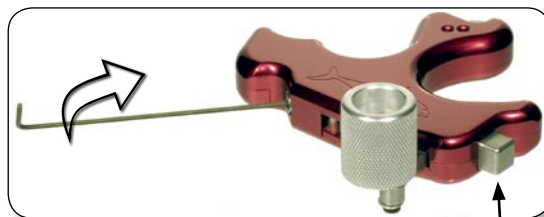


Figure 3

Cocking Button Released



Figure 4



Figure 5 (Complete)

Now, turn Sear Set Screw very, very slowly counter clockwise and compress the Cocking Button. Stop turning when the Cocking button can remain compressed, unaided, as shown in Figure 4.

At this point, continue to turn Sear Set screw counter clockwise for 1/3 to 1/2 of a full revolution. This achieves the factory setting.

Product and Service Information



CCPorter, Inc.

Precision Shooting Products

PO Box 2 | Covina, CA 91723-0002
Phone: (626) 966-8138 | Fax: (626) 966-8138
support@thecenterx.net | www.thecenterx.net